

Remote Control – Remove / Reprogram Codes



1.
Apply power through the ABL Power Key. The battery LEDs will cycle through then settle on the measured battery voltage.



2.
Press and hold the BATTERY LEVEL switch down until both blue LEDs flash slowly. This may be more than 5 seconds.



3.
Press both Launch and Retrieve buttons at the same time and hold them down. The blue light will come on for the retrieve button immediately but continue holding the buttons till both Launch and Retrieve blue lights flash very slowly.



4.
You can remove your fingers now but you need to wait until the blue lights start flashing faster (same speed as section 2 above).



5.
Press and hold the BATTERY LEVEL button down until both blue LEDs stop flashing, this exits the Remote Set Up Mode.