

## Remote Control Setup



**1.**  
Apply power through the ABL Power Key. The battery LEDs will cycle through then settle on the measured battery voltage.



**2.**  
Press and hold the BATTERY LEVEL switch on for 5 seconds, both blue LEDs will flash slowly.



**3.**  
Press the LAUNCH button once on the control panel, the left, blue LED will remain on. Press the LAUNCH button on the remote control - the left LED will go out, then both LEDs will be flashing slowly again.



**4.**  
Press the RETRIEVE button once, the right, blue LED will remain on. Press the RETRIEVE button on the remote control - the right LED will go out, then both LEDs will be flashing slowly again.



**5.**  
Repeat steps 3 and 4 again for the next remote control, or else hold the BATTERY LEVEL button on until both LEDs stop flashing to exit Remote Set Up mode.